INSTALLATION INSTRUCTIONS

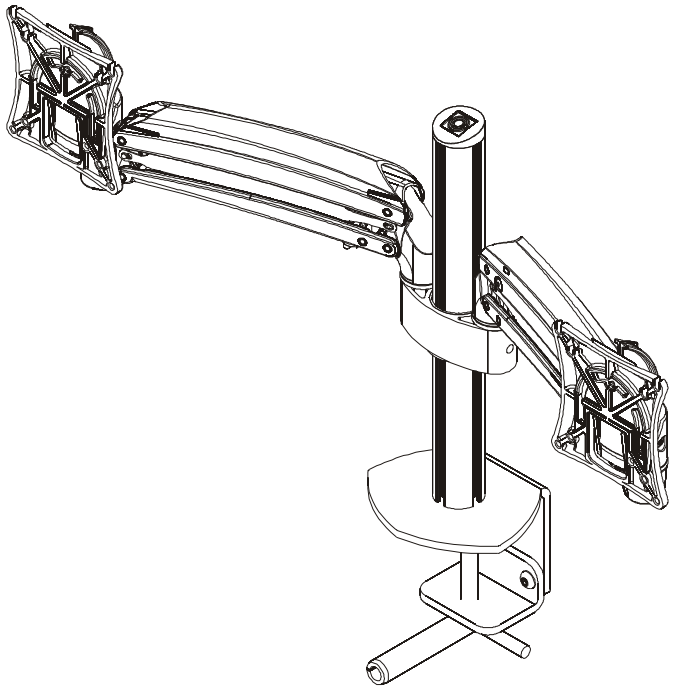

K1 Series Dual Display Column Mount

CHIEF®

Our Mounts. **Your Vision.**

K1C250

DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.

IMPORTANT SAFETY INSTRUCTIONS!

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located between the K1C250 Monitor Arm up to (and including) the display does not exceed 25 lbs (11.34 kg) per arm. Use with products heavier than the maximum weight indicated may result in collapse of the mount and its accessories causing possible injury.

WARNING: Use this mounting system only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

WARNING: Never operate this mounting system if it is damaged. Return the mounting system to a service center for examination and repair.

WARNING: Do not use this product outdoors.

--SAVE THESE INSTRUCTIONS--

DIMENSIONS

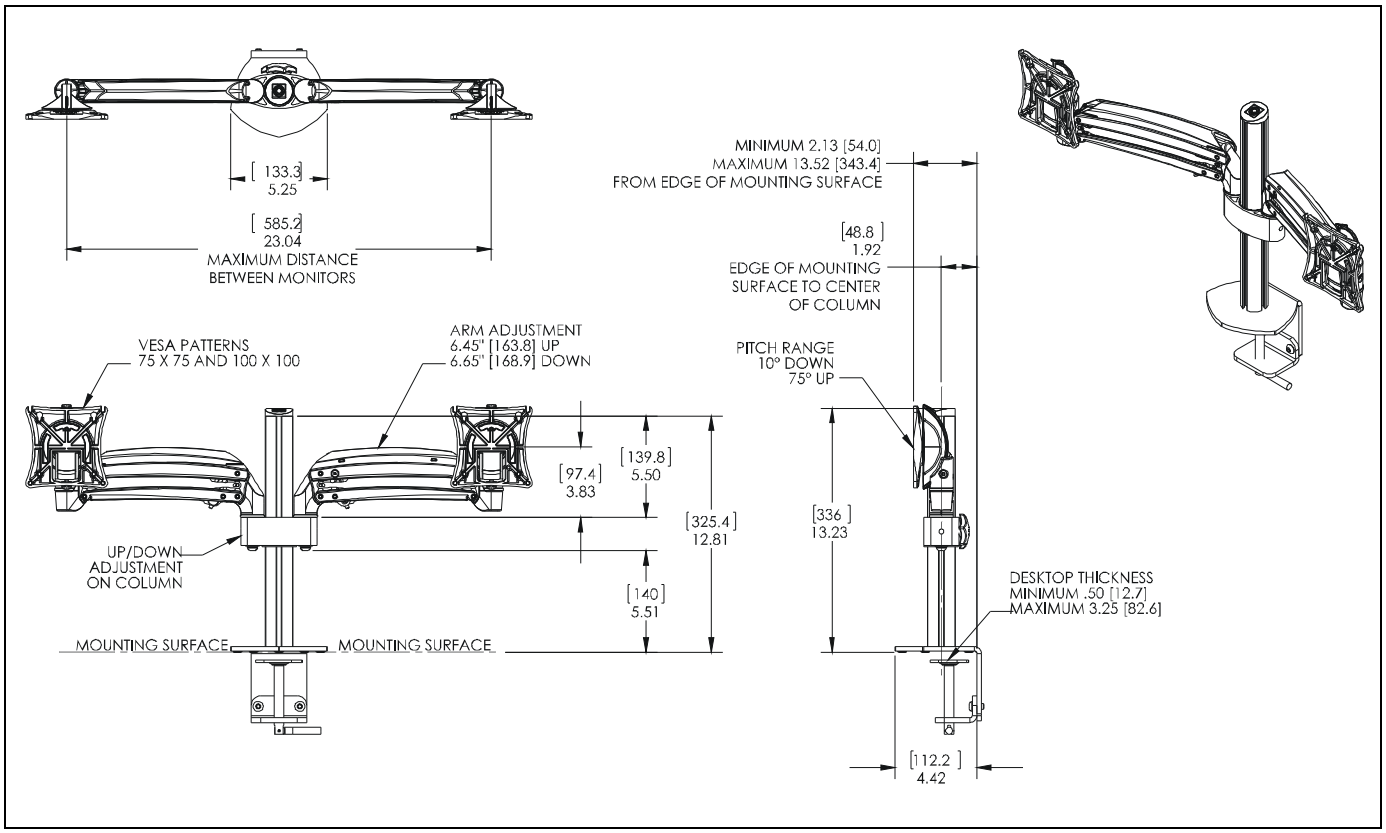
[133.3]
5.25
[585.2]
23.04
MAXIMUM DISTANCE
BETWEEN MONITORS
VESA PATTERNS
75 X 75 AND 100 X 100
ARM ADJUSTMENT
6.45" [163.8] UP
6.65" [168.9] DOWN
[97.4]
3.83
[139.8]
5.50
[325.4]
12.81
[140]
5.51
UP/DOWN
ADJUSTMENT
ON COLUMN
MOUNTING SURFACE
MOUNTING SURFACE
MINIMUM 2.13 [54.0]
MAXIMUM 13.52 [343.4]
FROM EDGE OF MOUNTING SURFACE
[48.8]
1.92
EDGE OF MOUNTING
SURFACE TO CENTER
OF COLUMN
PITCH RANGE
10° DOWN
75° UP
[336]
13.23
DESKTOP THICKNESS
MINIMUM .50 [12.7]
MAXIMUM 3.25 [82.6]
[112.2]
4.42

LEGEND

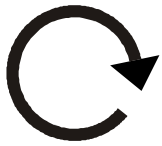	Tighten Fastener Apretar elemento de fijación Befestigungsteil festziehen Apertar fixador Serrare il fissaggio Bevestiging vastdraaien Serrez les fixations
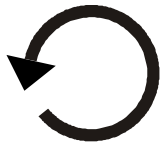	Loosen Fastener Aflojar elemento de fijación Befestigungsteil lösen Desapertar fixador Allentare il fissaggio Bevestiging losdraaien Desserrez les fixations
	Phillips Screwdriver Destornillador Phillips Kreuzschlitzschraubendreher Chave de fendas Phillips Cacciavite a stella Kruiskopschroevendraaier Tournevis à pointe cruciforme
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche
	By Hand A mano Von Hand Com a mão A mano Met de hand À la main
	Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale Zeskantsleutel Clé à tête hexagonale
	Pencil Mark Marcar con lápiz Stiftmarkierung Marcar com lápis Segno a matita Potloodmerkteken Marquage au crayon
	Drill Hole Perforar Bohrloch Fazer furo Praticare un foro Gat boren Percez un trou
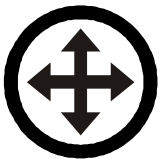	Adjust Ajustar Einstellen Ajustar Regolare Afstellen Ajuster
	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez
	Optional Opcional Optional Opcional Opzionale Optie En option
	Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança Chiave di sicurezza Veiligheidssleutel Clé de sécurité

TOOLS REQUIRED FOR INSTALLATION

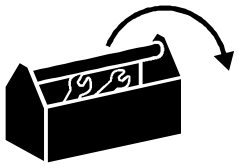

3/16" (included)
1/8" (included)

#2

PARTS

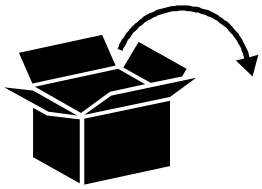

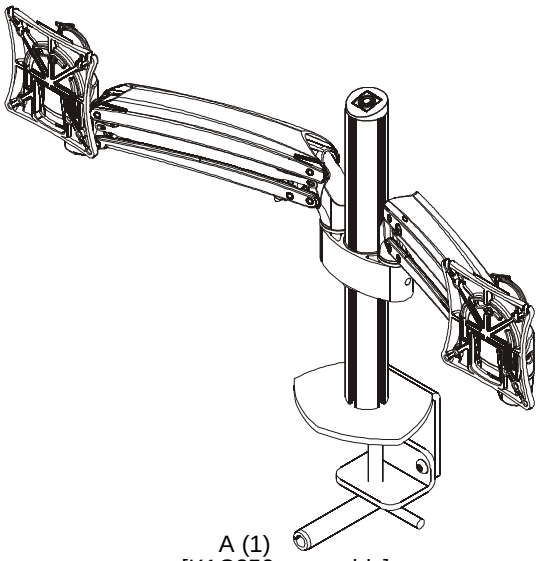

A (1)
[K1C250 assembly]

B (8)
M4x14mm

C (8)
M4x25mm

D (8)
M10x5.3x10

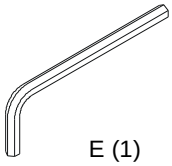

E (1)
3/16"

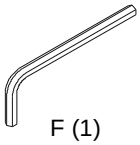

F (1)
1/8"

Assembly And Installation

Connecting K1C250 to Desk

1. Loosen clamp screw until enough space is created between clamp and mount to allow for desk mounting.(See Figure 1)

NOTE: If space is limited behind desk (i.e. against wall, etc.), remove clamp screw and attachment entirely and reattach clamp screw prior to Step 3! (See Figure 2)

2. Place mount on top of desk at desired mounting location. (See Figure 1)
3. Tighten clamp using clamp screw until mount is securely fastened to desk. (See Figure 1)

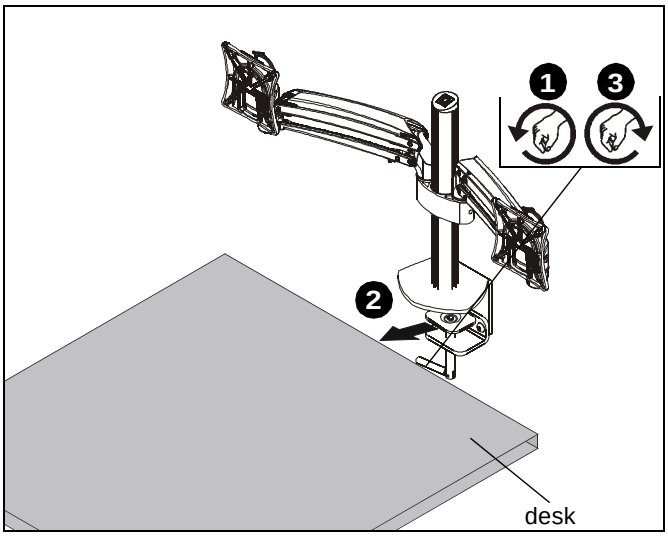

Figure 1

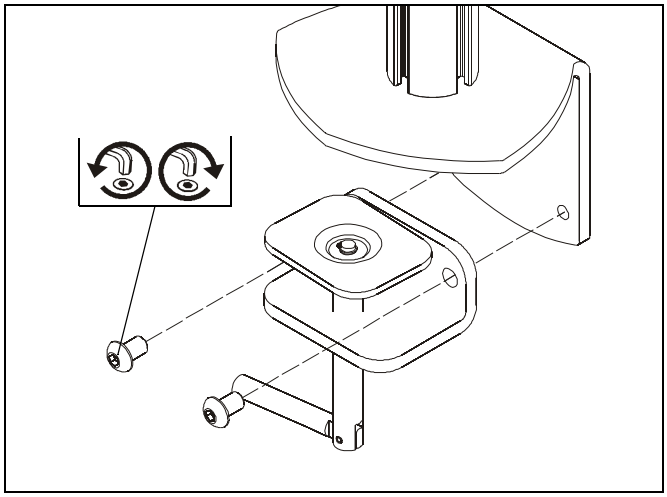

Figure 2

Display Installation

1. Remove quick connect faceplate from mount by pressing release tab and sliding faceplate off mount. (See Figure 3)

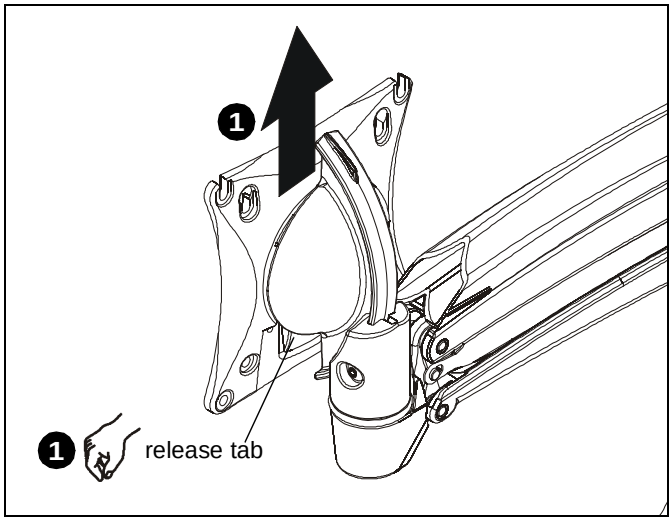

Figure 3

2. Carefully place display face down on protective surface.

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located between the K1C250 Monitor Arm up to (and including) the display does not exceed 25 lbs (11.34 kg) per arm. Use with products heavier than the maximum weight indicated may result in collapse of the mount and its accessories causing possible injury.

3. Connect faceplate to display

   For flush mounting hole installation:

   - Using Phillips screwdriver, carefully install four M4x14mm screws (B) through corresponding holes on faceplate and into the mounting holes on the display. (See Figure 4)

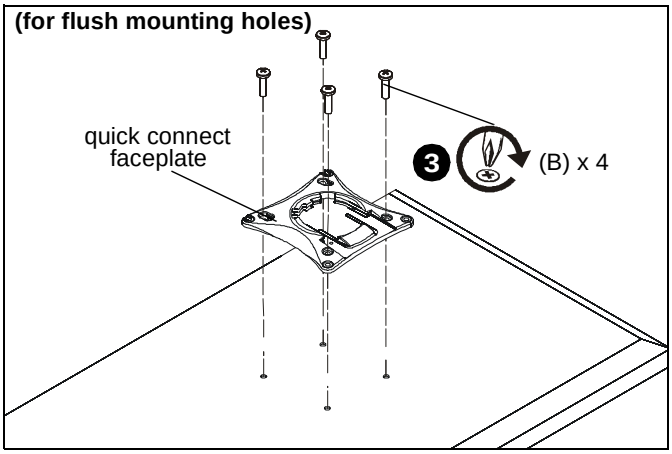

Figure 4

For recessed mounting hole installation:

- Place four spacers (D) on top of mounting holes on back of display. (See Figure 5)
- Using Phillips screwdriver, carefully install four M4x25mm screws (C) through corresponding holes on faceplate, spacers (D) and into the mounting holes on the display. (See Figure 5)

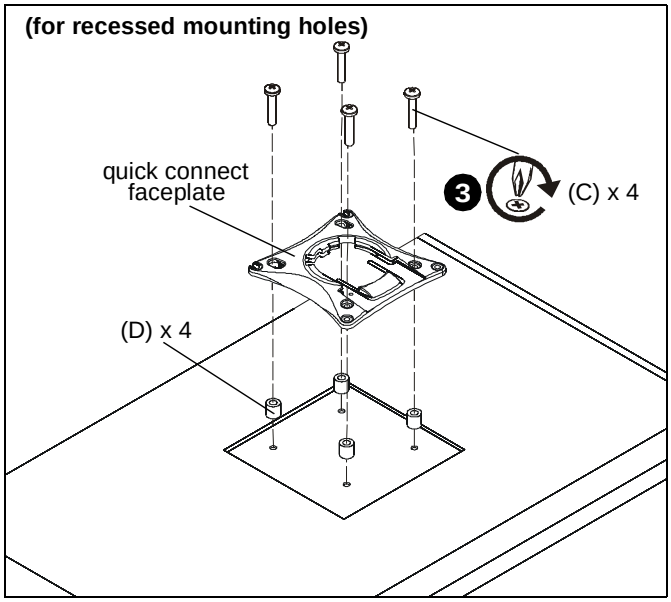

Figure 5

4. Position display with faceplate attached above mount. (See Figure 6)
5. Slide faceplate onto mounting head until release tab clicks into place. (See Figure 6)

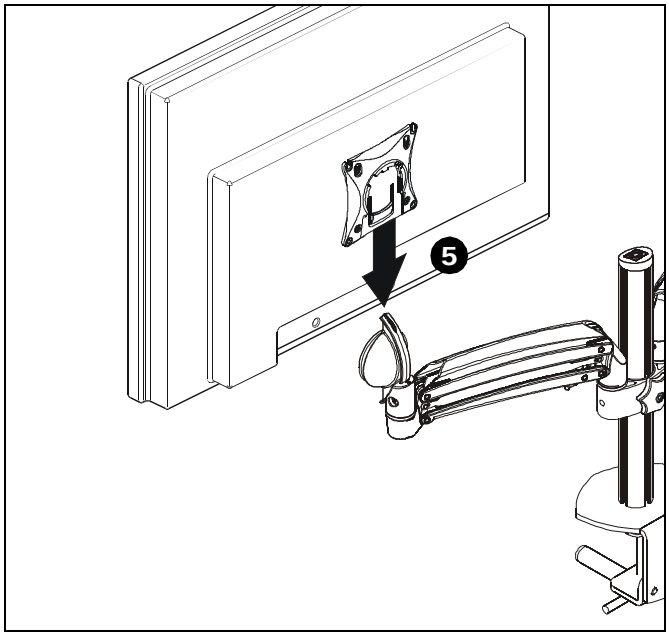

Figure 6

6. Repeat Steps 1-5 for second display.

Adjustments

Head Tilt Adjustment

1. Adjust head tilt to desired tilt position. (See Figure 7)
2. Adjust head tilt tension screw to change the adjustment tension. (See Figure 7)

Pivot Adjustment

1. Adjust pivot position as desired. (See Figure 7)
2. Use 3/16" hex key (E) to adjust pivot point tension screws to change pivot adjustment tension. (See Figure 7)

Arm Height Adjustment

1. Adjust arm height to desired level. (See Figure 7)
2. Use 1/8" hex key (F) to adjust height-adjustable tension screw to change adjustment tension. (See Figure 7)

NOTE: Cable management cover must be opened in order to gain access to height-adjustable tension adjustment screw.

NOTE: Turn clockwise to reduce tension for lighter displays and counter-clockwise to increase tension for heavier displays.

Column Height Adjustment

1. Turn column height adjustment knob counter-clockwise until mount can be adjusted vertically on column. (See Figure 7)

NOTE: Depending on the weight of the displays, height adjustment may be easier if displays are removed. See Display Removal Section for details.

2. Adjust position of mount to desired height. (See Figure 7)
3. Turn column height adjustment knob clockwise until mount is securely tightened to column. (See Figure 7)

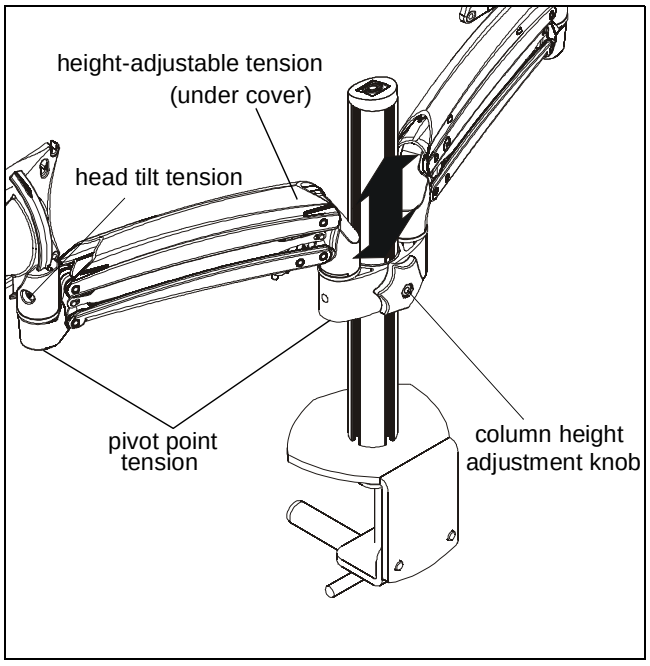

Figure 7

Pivot Adjustment Range

1. Adjust arm angles as desired within a 90 degree range from the edge and a perpendicular centerline of mount. (See Figure 8)

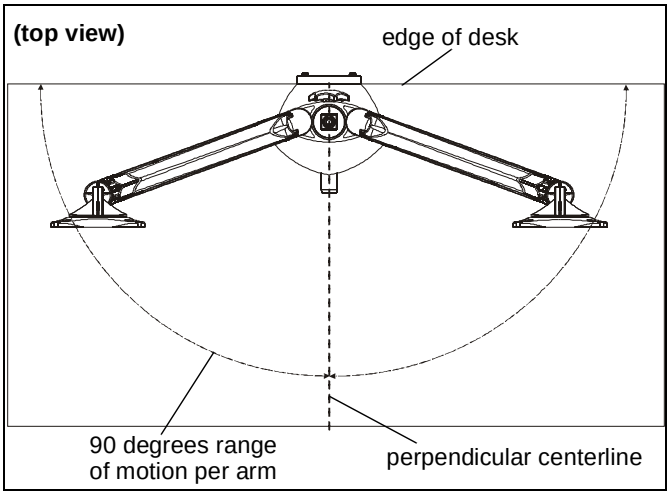

Figure 8

Portrait Adjustment

1. The monitor may be adjusted 90 degrees in either direction in order to provide a portrait view of the monitor. (See Figure 9)

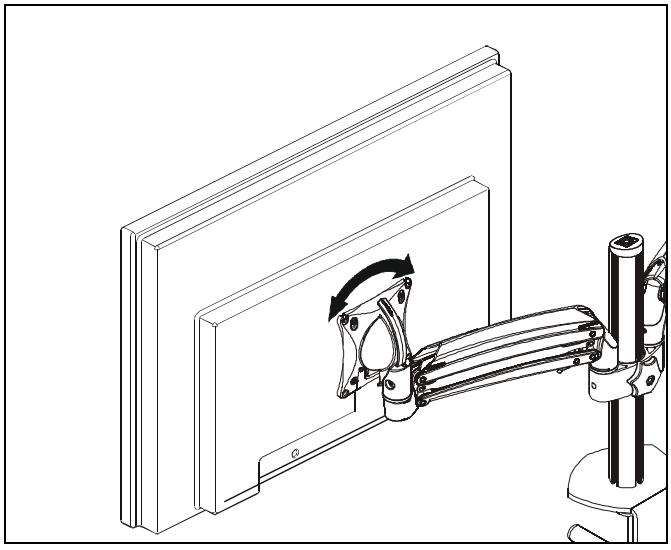

Figure 9

WARNING: Only remove display from mount when the display can be lifted up from the mount! DO NOT remove display unless the display is in the upright position! See Display Removal section for details.

Cable Management

1. Use screwdriver to unhinge tab on either end of cable management cover on upper arm. (See Figure 10)
2. Slide screwdriver along edge of cover until remaining tabs are unhinged and cover is in the "open" position. (See Figure 10) and (See Figure 11)

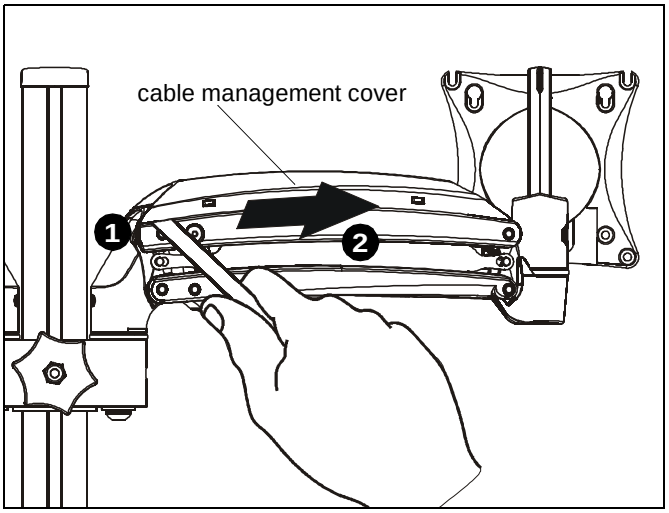

Figure 10

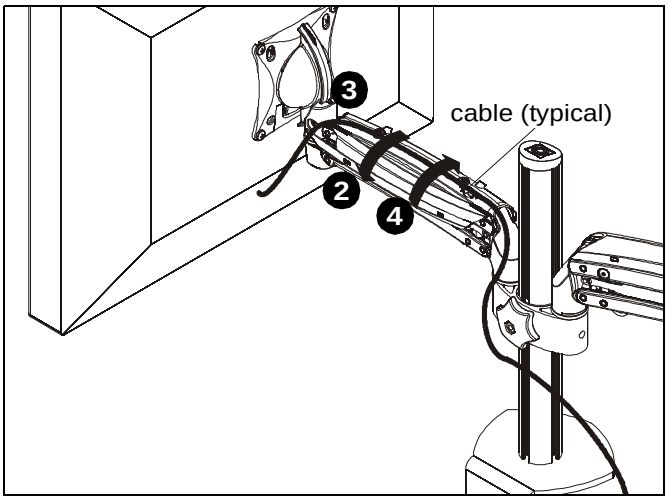

Figure 11

3. Route cables through cable management channel. (See Figure 11)

IMPORTANT ! : Be sure to leave enough slack in the cables near display and arm joint to allow for full arm articulation!

4. Close cable management cover on monitor arm. (See Figure 11)
5. Repeat Steps 1-4 for the other mounting arm.

Display Removal

WARNING: Only remove display from mount when the display can be lifted up from the mount! DO NOT remove display unless the display is in the upright position! (See Figure 12)

1. Make sure display is in the upright position.
2. Remove quick connect faceplate from mount by pressing release tab and sliding faceplate off mount. (See Figure 12)

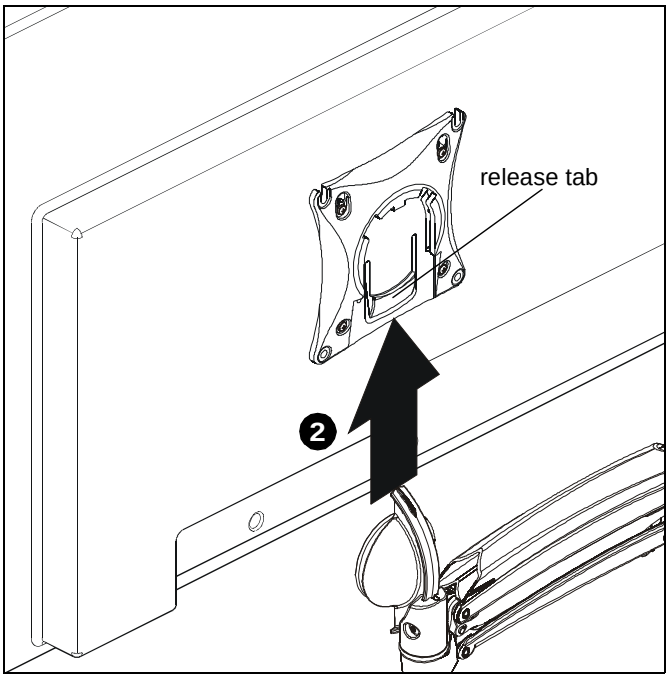

Figure 12

CHIEF®

Our Mounts. **Your Vision.**

Chief Manufacturing, a products division of Milestone AV Technologies

8800-002131 Rev 01
©2011 Milestone AV Technologies, a Duchossois Group Company
www.chiefmfg.com
12/11

USA/International
A 8401 Eagle Creek Parkway, Savage, MN 55378
P 800.582.6480 / 952.894.6280
F 877.894.6918 / 952.894.6918

Europe
A Franklinstraat 14, 6003 DK Weert, Netherlands
P +31 (0) 495 580 852
F +31 (0) 495 580 845

Asia Pacific
A Office No. 1 on 12/F, Shatin Galleria
18-24 Shan Mei Street
Fotan, Shatin, Hong Kong
P 852 2145 4099
F 852 2145 4477

30% POST-CONSUMER CONTENT